


# PSU-PoE Installation Guide

The PSU-PoE allows you to power a TimeIPS Network Clock without the use of the AC adapter.

1) **DO NOT ADJUST THE VOLTAGE SELECTOR ON THIS PoE SPLITTER.** To use this device with a TimeIPS Network Clock the voltage selector **MUST** be set to 5V. This is the default setting. Any voltage setting other than 5V will damage the network clock and will void the manufacturers warranty.

2) Connect the PSU-PoE to your network clock as shown below.

## With PoE Enabled Switch

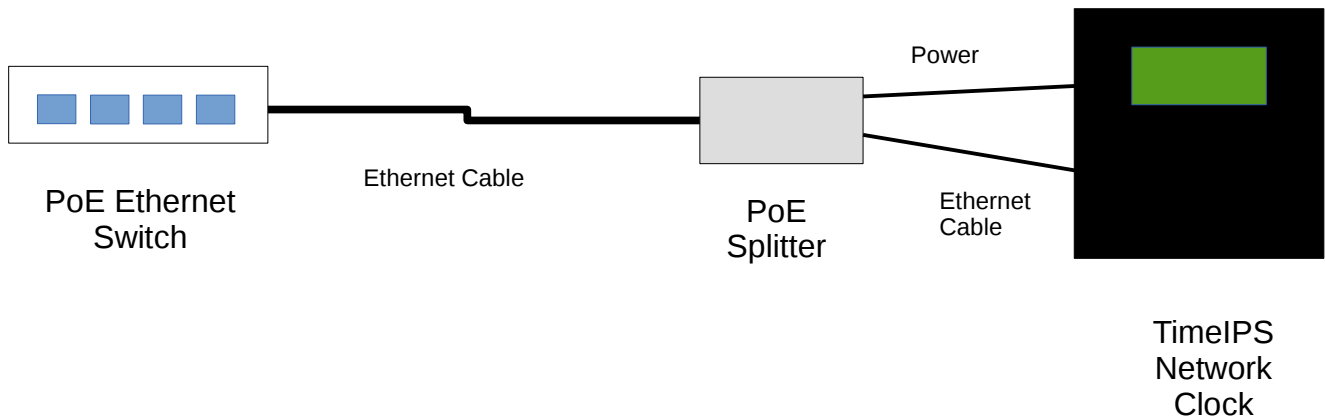

## Without PoE Enabled Switch

