

TimeIPS PROX-USB Template

Print at 100% on letter size paper.



Alternate Installation:

Proximity device can be mounted to the front of the IPS125T. This option requires drilling into the IPS125T case.

CAUTION: Drill only in the open area for cable routing. Damage to the unit caused by drilling is not covered under warranty.


Align the template on the front of the IPS125T case so the proximity device is flush with the left lower corner of the IPS125T case. See image above.

Tape the template to the IPS125T case.

Drill an 11/16" hole toward the top of the template for the cable. Drill a 3/32" hole for each of the two smaller holes.

Use two #4 screws (3/8" in length) to mount the proximity device to the IPS125T. Screw in from the mounting area on the back of the IPS125T.

CAUTION: Using screws longer than 3/8" may damage the proximity device. Damage caused by incorrect screws is not covered under warranty.

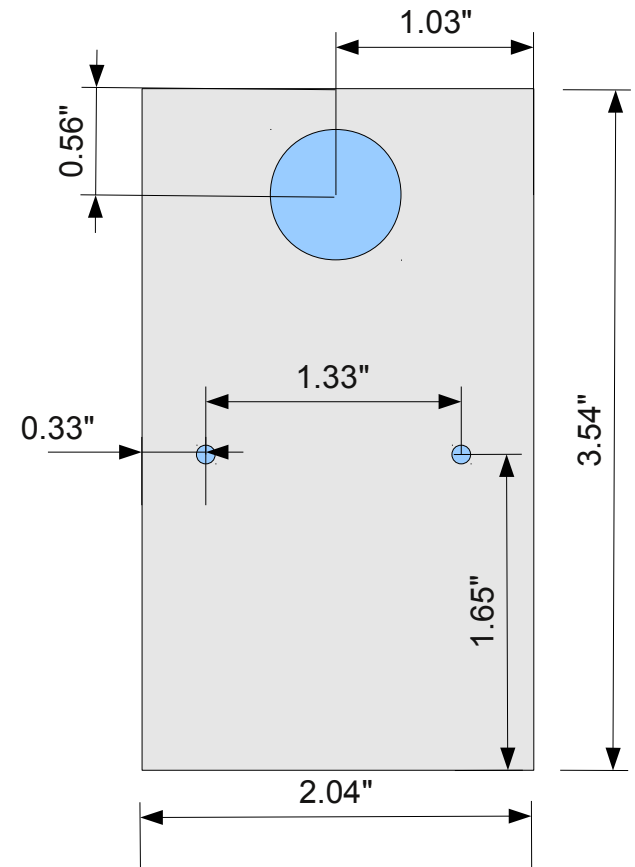

TimeIPS PROX-USB bottom edge